



PREMIUM AFTERMARKET WIND DEFLECTORS

SAAB 9.3 YS3F (2003-2014) wind deflector fitting instructions



For our installation video please visit: <https://youtu.be/wpTZRRB-heg>
Copy the link in your browser and you will be directed to the video.

What's in the box

- 1 x wind deflector
- 1 x installation manual

Product No: 32.03.01.01 BLACK



Product No: 32.03.01.03 BEIGE



Product No: 32.03.01.04 GREY





PREMIUM AFTERMARKET WIND DEFLECTORS

STEP 1

Fold the front seats forward.



STEP 2


Place the wind deflector in the car and slide the rear pins of the wind deflector into the opening of the rear seatbelt covers.



PREMIUM AFTERMARKET WIND DEFLECTORS

STEP 3

Unlock the side pins of the wind deflector and click the wind deflector in the factory fitted wind deflector mounts.

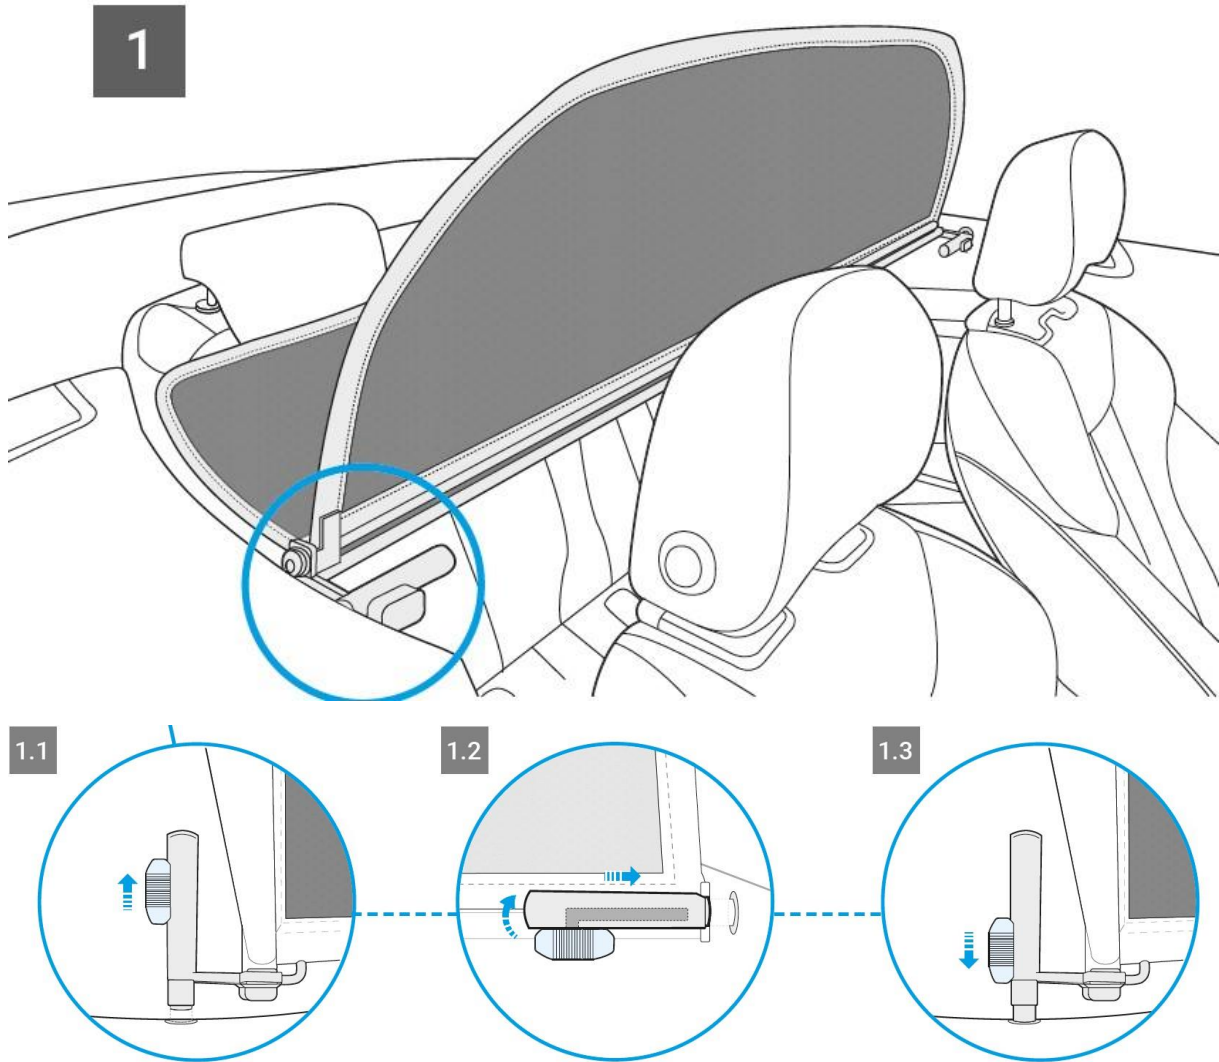



PREMIUM AFTERMARKET WIND DEFLECTORS



STEP 4

Go out for a drive and enjoy your APERTA wind deflector!